UM-0127A-003-00

Instruction manual

SHIMANO SPORT CAMERA (CM-1000)

Names of parts

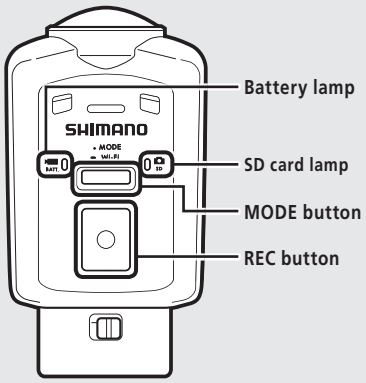

Preparation for taking pictures

• Open the cover on the back of the camera and insert a microSD card (optional).

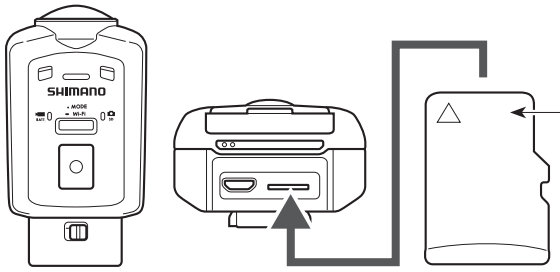

MicroSD/SDHC card of speed class 6 or higher (up to 32 GB in capacity)

Note:
Observe the correct orientation when inserting the SD card.

• If you try to operate the camera without an SD card mounted, a series of warning beeps sound to indicate that an SD card is missing. The camera cannot be used without an SD card mounted.

Taking pictures

■ Switching the power on and off

0.5 sec Pressing the **MODE button** once turns on the camera with two beeps. At that time, the two LEDs turn on.

4 sec Holding down the **REC button** turns off the camera with four beeps.

• When the camera is turned on, the two LEDs at the center of the camera light up for about 2 seconds.
• The left LED indicates the battery level and the right LED indicates the remaining capacity of the SD card.

Battery level according to lamp display color

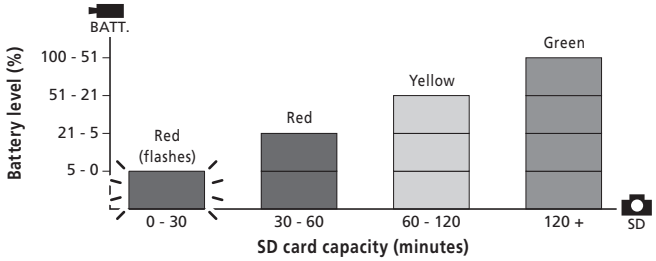

■ Recording video

• Pressing the **REC button** once starts video recording with two beeps.
• Pressing the **REC button** again stops video recording with a series of beeps.

■ Switching between the recording modes

0.5 sec
• Turn on the camera and press the **MODE button** to change the recording mode.
• Each time you press the **MODE button**, the recording mode changes in the order of Full HD, HD, WVGA, and Still Image.

Resetting the camera
If the camera does not respond to any operation, it may be freezing. Press and hold both the **MODE** and **REC buttons** (8 seconds or longer) to reset the main unit.

Connecting to a smartphone

■ Downloading a custom app

• Download the smartphone application from App Store for iPhones or Play Store for Android phones.
Type "shimano" to search for the smartphone application.

■ Camera settings

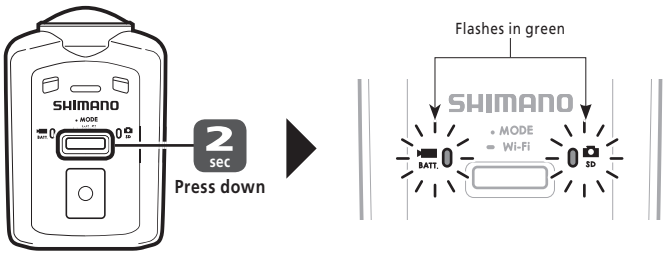

• Turn on the camera and hold down the **MODE button** until you hear a beep, then the LED turns green to indicate that the camera is transmitting Wi-Fi signals.

■ Smartphone settings

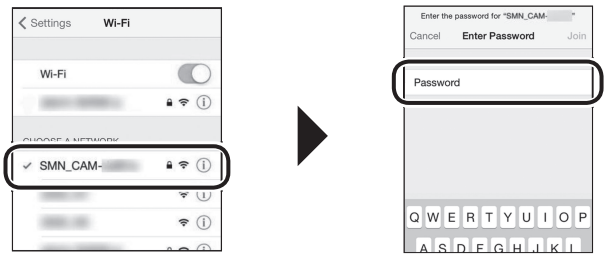

• Turn on Wi-Fi in your smartphone and select the network "SMN_CAM-xxxx".
• Enter "SHIMANO_Cam" for the Wi-Fi password to establish the connection. After the connection is established, start the smartphone application.

Carefully type the password as it contains upper and lowercase letters and an underscore.